


SIMPSON
Strong-Tie

MASONRY HANGER

HJHM

Heavy duty masonry hanger for supporting trusses and timber joists from masonry walls.

NOTE - Minimum of 3 courses of solid block (675mm) required above hanger with mortar fully cured before applying load.

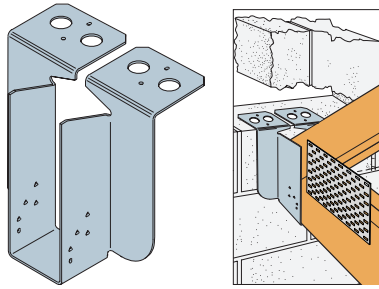

PI-HJHM

For fastener and load information, and for limited warranty information see Simpson Strong-Tie Catalogue or contact us at 01827 255 600


SIMPSON
Strong-Tie

MASONRY HANGER

HJHM

Heavy duty masonry hanger for supporting trusses and timber joists from masonry walls.

NOTE - Minimum of 3 courses of solid block (675mm) required above hanger with mortar fully cured before applying load.

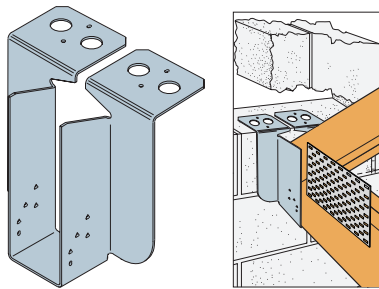

PI-HJHM

For fastener and load information, and for limited warranty information see Simpson Strong-Tie Catalogue or contact us at 01827 255 600


SIMPSON
Strong-Tie

MASONRY HANGER

HJHM

Heavy duty masonry hanger for supporting trusses and timber joists from masonry walls.

NOTE - Minimum of 3 courses of solid block (675mm) required above hanger with mortar fully cured before applying load.

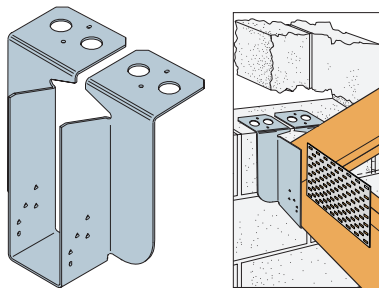

PI-HJHM

For fastener and load information, and for limited warranty information see Simpson Strong-Tie Catalogue or contact us at 01827 255 600


SIMPSON
Strong-Tie

MASONRY HANGER

HJHM

Heavy duty masonry hanger for supporting trusses and timber joists from masonry walls.

NOTE - Minimum of 3 courses of solid block (675mm) required above hanger with mortar fully cured before applying load.

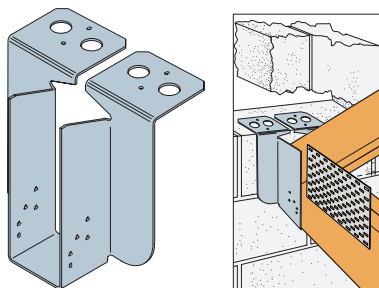

PI-HJHM

For fastener and load information, and for limited warranty information see Simpson Strong-Tie Catalogue or contact us at 01827 255 600